

SignBar^T / SignPanel^E

Wall Mount Modules

Assembly, Installation & Maintenance Instructions

Handling


Take care when removing sign from crate. The sign has been preassembled at the factory and shipped as it will appear. Although the sign may seem to be fully assembled, the vertical mounting channels are not attached to the sign faces.

Remove protective wrapping from sign faces. Carefully release the mounting channels by pulling away from the faces.

Preparation

Installation will require a level, pencil, electric drill, and appropriate anchors for wall surface. It is generally recommended directional signs be centered approximately 60" from floor or walking surface, unless otherwise specified.

Remove top end caps from the left and right wall channels prior to installation. This will permit easy placement of bars and/or panels.

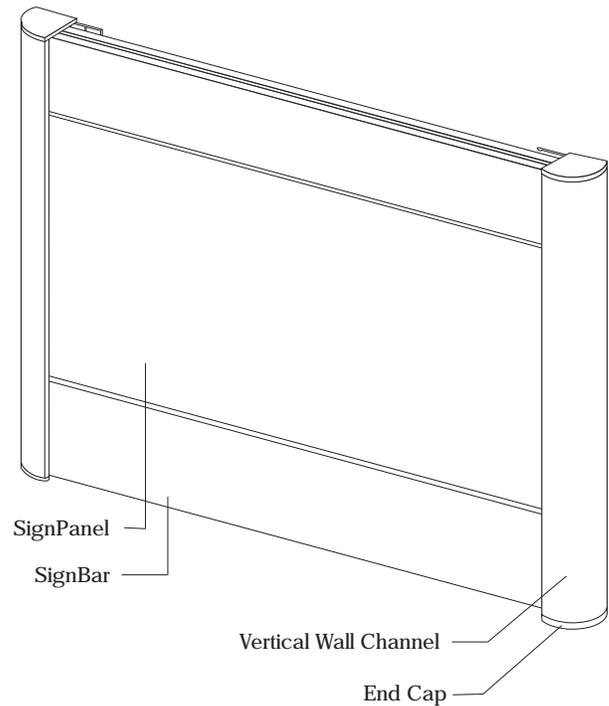

Installation


1. On the desired mounting surface, locate and mark the bottom center of sign.
2. Using a level, mark outside position of the vertical mounting channels. Location marks should be exactly one half the overall sign width from the center line.

Example: (WCR / WCB) A 36" Visible area will have an overall width dimension of 39-7/8" or a one half width dimension of 19-15/16".



3. Locate the bottom of the channel on either mark, and plumb channel using a level. Transfer mounting hole pattern to wall surface, drill and install anchors suitable for conditions.
4. Remove caps from the top of both vertical channels, and mount Wall Channels to surface. Before tightening check to see that each is plumb.

Continued on reverse side.

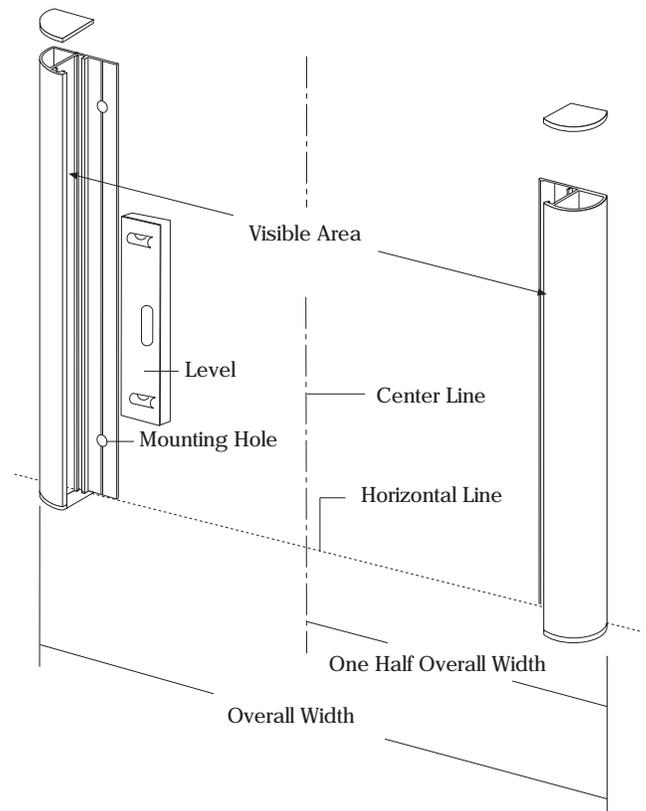

SignBar^T / SignPanel^E

Wall Mount Modules

Assembly, Installation & Maintenance Instructions

5. Insert SignBars into the top channel opening as shown. Be sure there is sufficient clearance for the bars to slide easily. If necessary, adjust the channel width slightly by loosening fasteners.

Replace top left and right end caps.

Part Identification



WCR
Wall Channel
Radius



WCCR
Wall Channel Cap
Radius



WCB
Wall Channel
Bevel




WCCB
Wall Channel Cap
Bevel



WCS
Wall Channel
Square



WCCS
Square Wall
Channel Cap

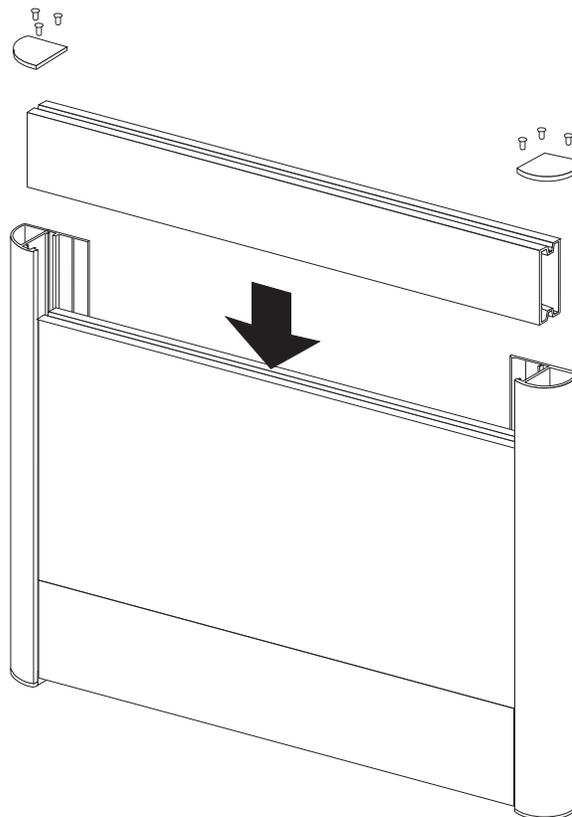

Changing and Replacing Bars/Panels

To change message bars/panels, first remove Top Caps. Use the #6 Square drive allen wrench provided with the initial package to remove post caps. (Early APCO post designs required 5/64" allen wrench. The Square, introduced June 1996, replaces previous hardware.) Simply slide upward and remove bars/panels to be changed. Replace with equal size bars/panels and replace caps.

Cleaning/Touch Up

Use only mild soap and water to clean sign surfaces. *Do not use any Amonia based or chemical cleaners* as they may cause streaking and color fade. Touch up paint along with instructions is included for minor chips and scratches that may occur from road side debris, etc.

IMPORTANT!

Note about Satin Anodized and Duranodic Aluminum Finishes:

Aluminum finishes are subject to considerable color range. "PERFECT COLOR MATCH IS IMPRACTICAL IN PRODUCTION", states ALCOA in its "Aluminum in Architecture" manual. Therefore finishes are subject to color variations between bars, spacers and posts for the same project and even a single sign unit.